




# RHINO-RACK

## 43178 - Eye Bolt Pioneer Alloy Tray

Place these instructions in the vehicle's glove box after installation is complete.

**Important:** Please read these instructions carefully prior to installation.  
Please refer to your fitting instruction to ensure that the alloy tray is installed correctly.  
Check the contents of this kit before commencing fitment and report any discrepancies.

Item	Component Name	Qty 43178	Part No.
1	M10 Eye Bolt Black	4	C013-B
2	M10 Shakeproof Washer	4	W021
3	M10 x 38 x 2.5mm Flat Washer	4	W022
4	M10 x 30 x 2.5mm Flat Washer	4	W023
5	M10 Plate Nut	4	N061
6	Instructions	1	RR248

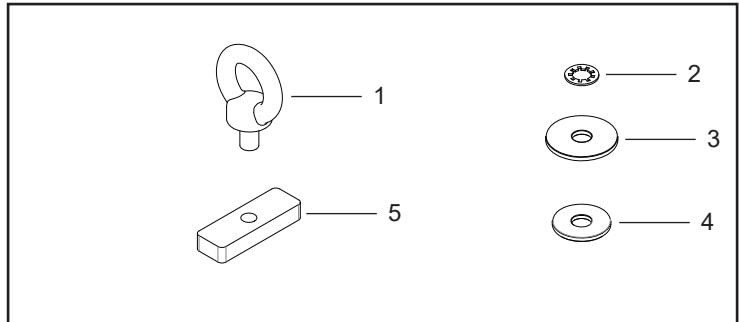

**1**

**Assembled View**

**2** **Fit Eye Bolt to Plank**

Lower the eye bolt assembly into the slot at the front of the plank as shown, the plate nut should be sitting within the C channel of the plank. Slide the eye bolt along the plank to the desired position. Secure the eye bolt in place by sliding a screwdriver through the eye of the bolt and rotate clockwise to tighten.

Eye Nut Assembly

Plank

**2**

**Note for Dealers and Fitters:**  
It is your responsibility to ensure these fitting instructions are given to the end user or client  
Rhino-Rack, 22 Hanson St, Eastern Creek  
NSW 2766, Australia  
(02) 8846 1900  
rhinorack.com.au

Document No: RR-248  
Issue No: 04  
Issue Date: 29/07/2019

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.