



OUTLAW S E R I E S

Installation Instructions

817854

2019-21 GM SILVERADO/SIERRA 1500

5.3L ENGINE

Crew Cab & Double Cab

Without factory dual tailpipes

OVERVIEW:

1. Take a moment to read and understand these instructions before installing your Flowmaster performance system.

NOTE: Please inventory all parts now before continuing and if necessary, report any missing items to our tech line. This will avoid potentially stranding your vehicle until any missing replacement parts arrive.

ITM #	PART #	DESCRIPTION	QTY.
8	26434S	Rear Exit Pipe	2
9	ST462B	Tips	2
N/A	PK980	Hardware Package includes	1
10	226HA	Left Rear Frame Hanger	1
11	HA566	2" x 1/8" Backing Plate	2
12	HA168	Rubber Hanger	1
13	MC300BS	3" Band Clamp	7
14	HW220	3/8"-16 x 4" Bolt	1
15	HW303	3/8" Flat Washer	1
16	HW309	3/8" Lock Washer	1
17	HW103	3/8" Nut	1
18	HW502	7/16" Hanger Keeper	2
19	HW503	1/2" Hanger Keeper	4
20	HW505	15" Zip Tie	1

ITM #	PART #	DESCRIPTION	QTY.
1	26742S	Inlet Pipe	1
2	TB700S	Extension Pipe	1
3	8430155-Z	Muffler	1
4	26743S	Left Front Tailpipe	1
5	26744S	Left Rear Tailpipe	1
6	26745S	Right Tailpipe	1
7	26433S	Side Exit Pipe	2

REMOVE STOCK EXHAUST SYSTEM:


2. Raise vehicle up on a hoist or rack to working height. If you don't have access to a hoist or rack, support vehicle with jack stands.

WARNING:

Avoid serious burns! Allow your vehicle time to cool completely before touching any factory engine components.

To ease preparation and installation of your new kit:


- Apply penetrating lubricant to mounts, bolts and clamps before you remove them.
- Use stands as necessary to support parts as you detach them from your vehicle and again as you install new parts.

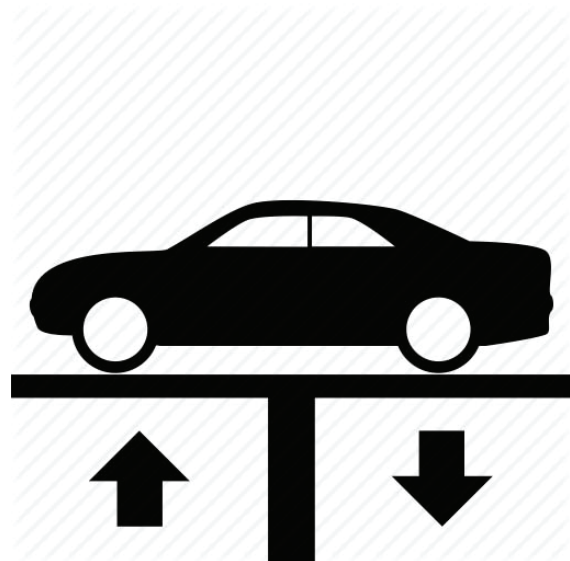

3. Cut tailpipe at muffler exit. Disassemble hanger wires from isolators and remove tailpipe section from vehicle.



4. Support muffler and disassemble wire hangers from isolators. Loosen ball clamp, disconnect inlet pipe at cat. converter and remove exhaust system. Release tab to remove clamp from pipe and retain it for later use.

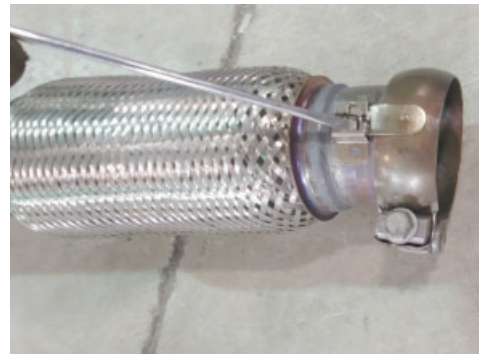

INSTALL FLOWMASTER EXHAUST SYSTEM:

5. Remove nuts from stock and Flowmaster clamps, apply anti-seize compound to bolts and re-install nuts.

NOTE: The image in this step is intended for illustrative purposes only and may or may not accurately reflect components included in your kit.


6. Every slip fit connection in this kit must seat 3" deep except for muffler connections which must seat 2" deep. Find all slip fit components in your kit and mark them accordingly so your Flowmaster exhaust system fits properly onto your vehicle.




7. Find your vehicle within specifications listed below, and if necessary, apply corresponding modifications to ensure it will install properly.

WHEEL BASE	BODY STYLE	BED LENGTH	INLET ASSY:
148"	Crew Cab	5'8	Inlet Pipe only
157"	Crew Cab	6'5	Inlet+Extension
148"	Double Cab	6'5	Inlet Pipe only


8. Place factory ball clamp (removed step 4) onto **inlet pipe (1)** then connect it to catalytic converter. Insert wire hanger in isolator and tighten clamp enough to allow for adjustment.

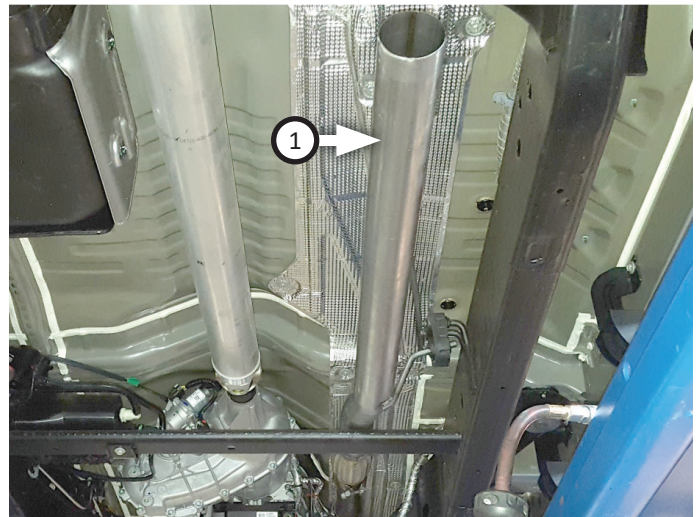



9. For applicable models, place **clamp (13)** onto **extension pipe (2)** then connect it to inlet pipe. Tighten clamp just enough to allow for later adjustment.

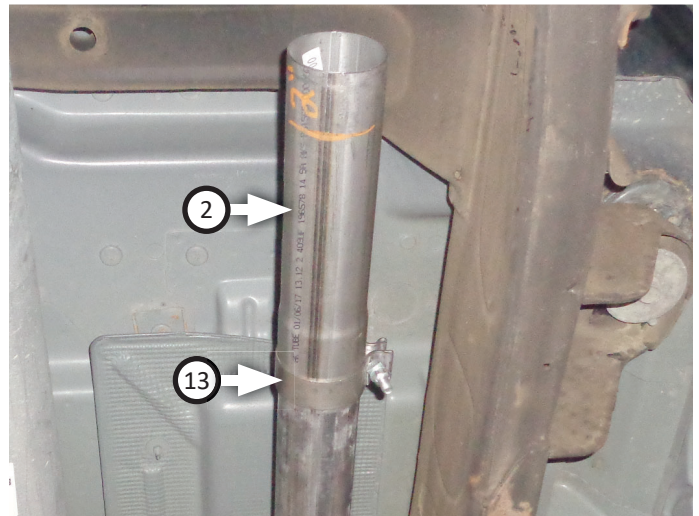


10. Place (x3) **clamps (13)** onto **muffler (3)** then connect it to inlet/extension pipe. Tighten front clamp just enough to allow for adjustment.

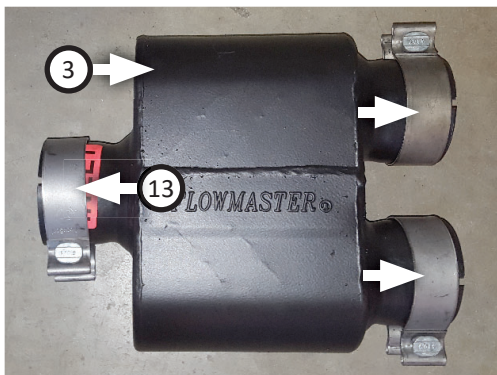


11. Fasten **frame hanger (10)** to vehicle frame (behind rear driver tire) with **bolt (14)**, (x2) **backing plates (11)**, **flat washer (15)**, **lock washer (16)** and **nut (17)**. Then fit **rubber hanger (12)** onto frame hanger.

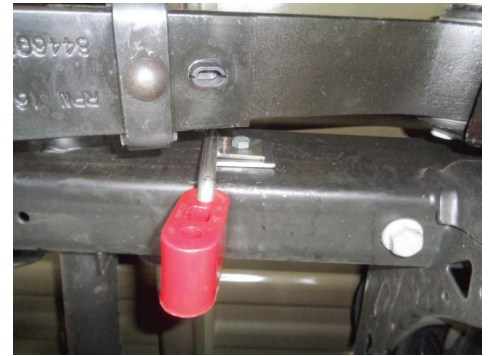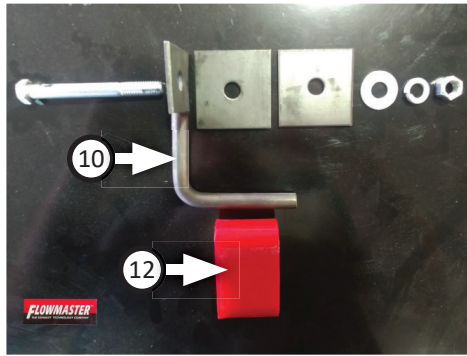

12. Route **left front (4)** and **right tailpipes (6)** over axle and connect them to muffler. Insert wire hangers into isolators then tighten clamps just enough to hold parts.

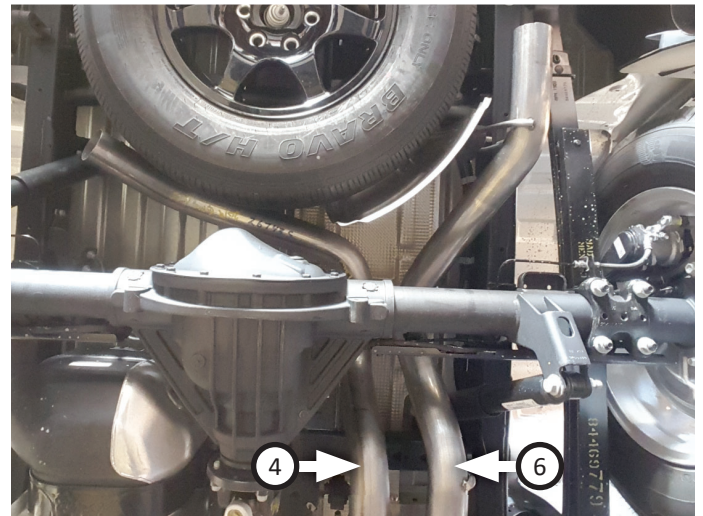


13. Place **clamp (7)** onto **left rear tailpipe (5)** then connect it to left front tailpipe. Insert wire hanger into rubber hanger then tighten clamp just enough to hold parts.

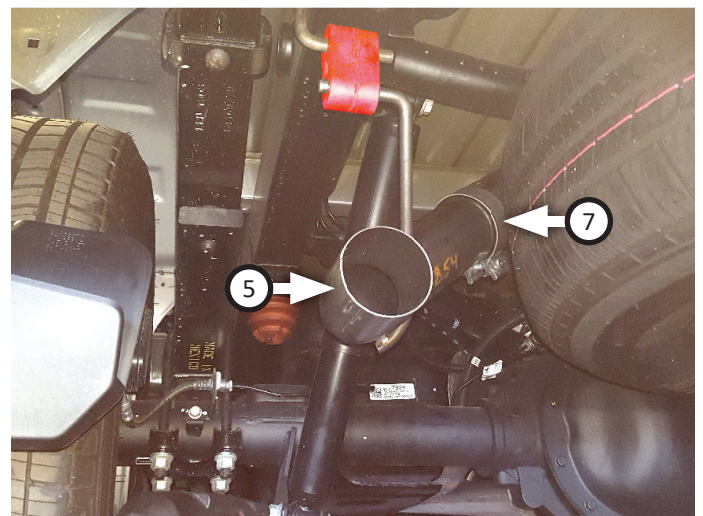


NOTE: For a rear exit exhaust, complete step 14 using (x2) rear exit pipes (8).

14. Place (x2 ea.) **clamps (13)** onto **side exit pipes (7)** then connect them to tailpipes and tighten clamps just enough to allow for later adjustment.
15. Place (x2) **tips (9)** onto side exit pipes and tighten inlets. Rotate exit pipes and tips to desired distance from body or bumper, so angle cut on tips are properly positioned.

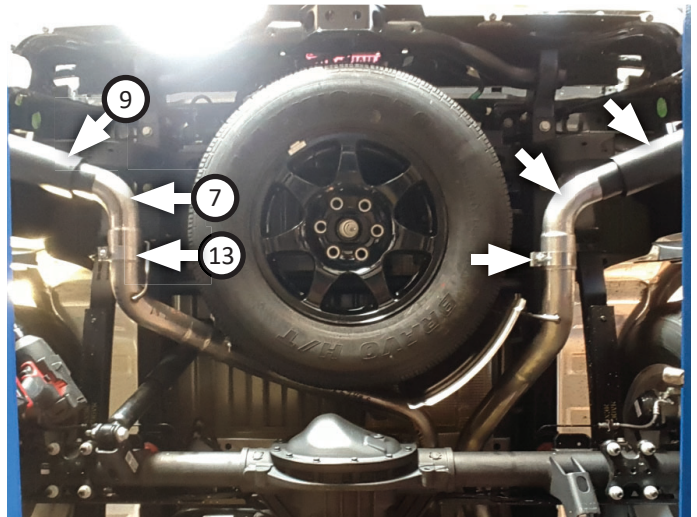

16. Adjust exhaust components for fit; maintaining ½" clearance and compensating for suspension, travel and vibration. Secure vent hose and brake lines away from heat with **zip tie (20)** then tighten all clamps. Finally, fit ¾" (**18**) and ½" (**19**) **hanger keepers (x6)** onto each sideways hanger.
17. Recommended: Secure slip-fit connections with a 1-inch tack weld then spray high-temp paint over each weld to prevent rust and premature corrosion.

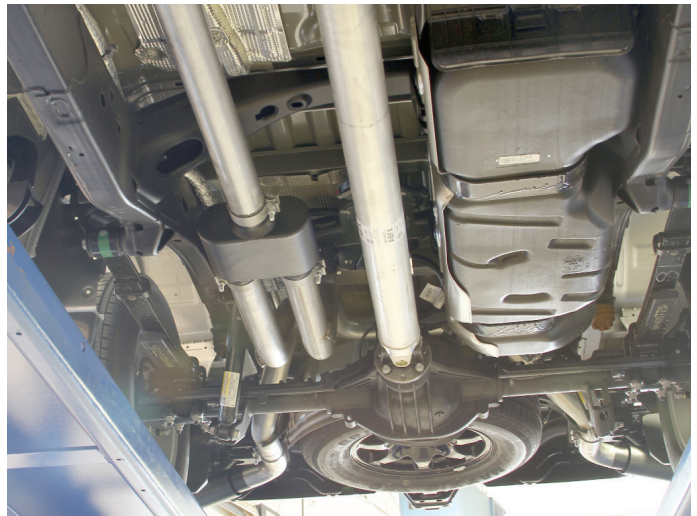

Congratulations, the installation of your FLOWMASTER performance exhaust system is now complete!





OUTLAW
S E R I E S

Installation Diagram
817854
2019-21 GM SILVERADO/SIERRA 1500
5.3L ENGINE
Crew Cab & Double Cab
Without factory dual tailpipes

