



Installation Instructions:


N-Fab

Nerf-Steps

N0570CC-TX

N0570CC

NISSAN
2005-2017
FRONTIER CREW CAB

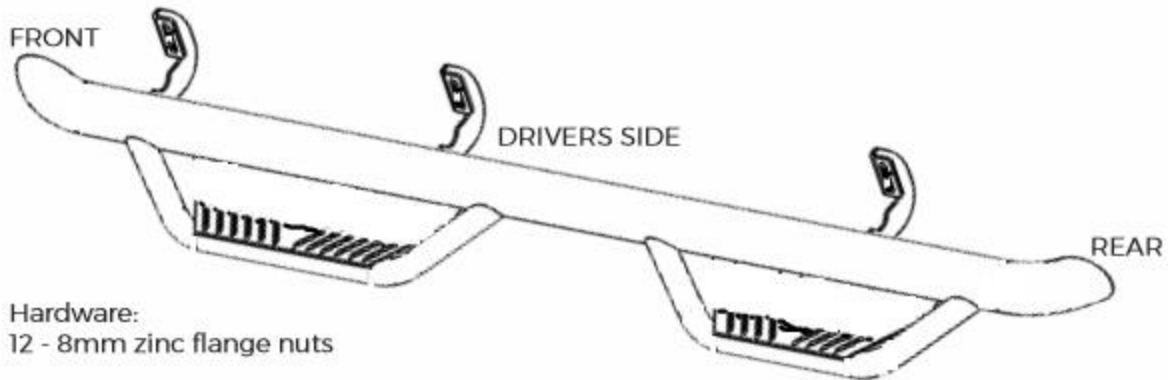

Hardware:
12 - 8mm zinc flange nuts

STEP 1:
Identify the driver and passenger bars. The center bracket is closer to the front of the truck.



STEP 2:
Each mounting bracket consists of holes that mount to the OE studs.



STEP 3:
Remove OE boards if equipped then locate mounting studs. Clean any dirt and debris from mounting studs and surface.



STEP 4:
Carefully place step onto place. Secure mounting holes over OE studs. Best to have an assistant to lift and hold board in place. Now hand tighten nuts to OE studs.



STEP 5:
Begin tightening bolts in an alternating pattern. **Avoid using power or air tools.** Over tightening could stripe or break the OE threaded inserts.



STEP 6:
Tighten to 20ft lbs torque to secure the board to the truck. Repeat the same procedure to the other side.

