


PART NUMBER: PRT0784CC-TX, PRT0777QC-TX
 PRODUCT: Aluminum Hoop Step
 APPLICATION: 07-18 CREW MAX/DOUBLE CAB

PREDATOR PRO



| HARDWARE DESCRIPTION | QTY. |
|---------------------------------|------|
| # T07-GLOSS KIT | 1 |
| M8-1.25X25 HX C/S 8.8 ZP DIN933 | 12 |
| 5/16" SPLIT LOCKWASHER ZINC | 12 |
| 5/16" USS FLATWASHER ZNC | 12 |

Step 1 Identify the Driver and Passenger side Step Rail.

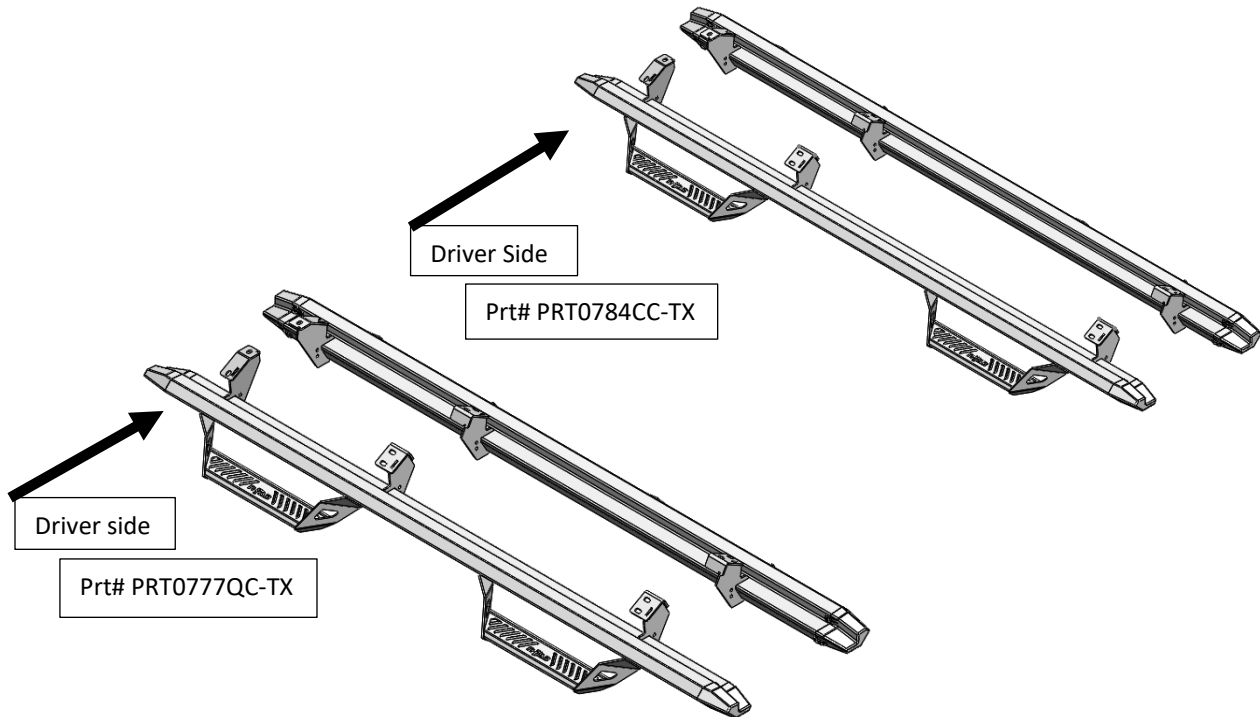

Step 1 Remove any factory hardware and discard.

Step 2 Beginning with the driver side, carefully raise the step rail up and match the brackets with the factory mounting locations. Next, starting with the center bracket and using the supplied M8x25mm hex bolts, 5/16" flat washer and lock washer start and leave loose.

Step 3 Start the remaining hardware with the front and rear bracket and leave loose.



Step 4 After final adjustment, torque each bolt to 17 ft/lb – 20 ft/lb.

Step 5 Repeat steps 1-4 with passenger side step. This concludes the installation.